

**** COMMODORE 64 BASIC V2 ****
64K RAM SYSTEM 38911 BASIC BYTES FREE
READY.

Press the F8 key to open the VICE menu

VICE C64 - main menu

Autostart image

- Drive →
- Tape →
- Cartridge →
- Printer →
- Machine settings →
- Video settings →
- Sound settings →
- Sampler settings →
- Snapshot →
- Save media file →
- Speed settings →
- Reset →
- Action on CPU JAM →
- Network →
- ◊ Pause
- Advance Frame
- Monitor →
- Virtual keyboard
- ◊ Statusbar
- Help →
- Settings management →
- Edit →

VICE C64 - main menu

- Autostart image
- Drive →
- Tape →
- Cartridge →
- Printer →
- Machine settings →**
- Video settings →
- Sound settings →
- Sampler settings →
- Snapshot →
- Save media file →
- Speed settings →
- Reset →
- Action on CPU JAM →
- Network →
- ◊ Pause
- Advance Frame
- Monitor →
- Virtual keyboard
- ◊ Statusbar
- Help →
- Settings management →
- Edit →

Model settings

C64 model → C64 NTSC

VICII model → NTSC-M

SID settings → 6581 (Fast SID)

CIA models

CIA 1 model → 6526 (old)

CIA 2 model → 6526 (old)

◆ Reset goes to IEC

Kernal revision → Rev 3

VICE C64 - main menu

- Autostart image
- Drive →
- Tape →
- Cartridge →
- Printer →
- Machine settings →
- Video settings →**
- Sound settings →
- Sampler settings →
- Snapshot →
- Save media file →
- Speed settings →
- Reset →
- Action on CPU JAM →
- Network →
- ◊ Pause
- Advance Frame
- Monitor →
- Virtual keyboard
- ◊ Statusbar
- Help →
- Settings management →
- Edit →

Video settings

Size settings →

Restore window size

◆ Video cache

VICII border mode → Normal

Color controls →

CRT emulation controls →

Render filter → None

VICII colors →

○ VICII Audio Leak emulation

◆ Enable Sprite-Sprite collisions

◆ Enable Sprite-Background collisions

Size settings

- Double size
- Double scan
- Fullscreen

Fullscreen mode

- Automatic
- Custom

Custom resolution

Width 1920
Height 1080

Initial resolution

Width 0
Height 0

OpenGL

- Fixed aspect ratio → True
- Custom aspect ratio 1.000000
- Filter → Linear
- Flip X
- Flip Y

Video settings

Size settings →
Restore window size

◆ Video cache

VICII border mode → Normal

Color controls →
CRT emulation controls →
Render filter → None

VICII colors →

○ VICII Audio Leak emulation

◆ Enable Sprite-Sprite collisions

◆ Enable Sprite-Background collisions

VICII colors

◉ External palette

Available palette files →
Custom palette file vice

VICII colors

◆ External palette

Available palette files →

Custom palette file vice

Available palette files

- ◊ Pepto (PAL)
- ◊ Pepto (old PAL)
- ◊ Pepto (NTSC, Sony)
- ◊ Pepto (NTSC)
- ◊ Colodore (PAL)
- ◊ ChristopherJam
- ◆ **VICE**
- ◊ C64HQ
- ◊ C64S
- ◊ CCS64
- ◊ Frodo
- ◊ Godot
- ◊ PC64
- ◊ RGB
- ◊ Deekay
- ◊ Ptoing
- ◊ Community Colors

Video settings

Size settings →
Restore window size

◆ Video cache

VICII border mode → Normal

Color controls →

CRT emulation controls →

Render filter → None

VICII colors →

○ VICII Audio Leak emulation

◆ Enable Sprite-Sprite collisions

◆ Enable Sprite-Background collisions

CRT emulation controls

Scanline shade 1000

Blur 0

Oddline phase 0

Oddline offset 0

Sound settings

◆ Sound

Volume 50%

Output driver → ALSA
Output Mode → System
Buffer size 1001 msec
Fragment size → Medium

Frequency

- 22050 Hz
- ◆ 44100 Hz
- 48000 Hz
- Custom frequency

Synchronization method

- Flexible
- Adjusting
- ◆ Exact

VICE C64 - main menu

- Autostart image
- Drive →
- Tape →
- Cartridge →
- Printer →
- Machine settings →
- Video settings →
- Sound settings →
- Sampler settings →
- Snapshot →
- Save media file →
- Speed settings →
- Reset →
- Action on CPU JAM →
- Network →
- ◊ Pause
- Advance Frame
- Monitor →
- Virtual keyboard
- ◊ Statusbar
- Help →
- Settings management →
- Edit →

Drive

Attach disk image to drive 8
Attach disk image to drive 9
Attach disk image to drive 10
Attach disk image to drive 11
Detach disk image from drive 8
Detach disk image from drive 9
Detach disk image from drive 10
Detach disk image from drive 11
Detach all disk images
Create new disk image →

Drive 8 settings →
Drive 9 settings →
Drive 10 settings →
Drive 11 settings →

- ◆ True drive emulation
- ◆ Drive sound emulation
- Drive sound Volume 50%
- Virtual device traps
- Autostart settings →
- Fliplist settings →

Settings management

Save current settings

Load settings

Save current settings to

Load settings from

Restore default settings

◊ Save settings on exit

◊ Confirm on exit

Active keymap → Positional

Keyboard mapping → American (us)

Load symbolic user keymap

Load positional user keymap

◊ Show keyboard status in statusbar

Save current keymap to

Save hotkeys

Save hotkeys to

Load hotkeys from

Load hotkeys

Save joystick map

Save joystick map to

Settings management

Save current settings

Load settings

Save current settings to

Load settings from

Restore default settings

◊ Save settings on exit

◊ Confirm on exit

Active keymap → Positional

Keyboard mapping → American (us)

Load symbolic user keymap

Load positional user keymap

◊ Show keyboard status in statusbar

Save current keymap to

Save hotkeys

Save hotkeys to

Load hotkeys from

Load hotkeys

Save joystick map

Save joystick map to

VICE MESSAGE

Settings saved.



VICE C64 - main menu

- Drive →
- Tape →
- Cartridge →
- Printer →
- Machine settings →
- Video settings →
- Sound settings →
- Sampler settings →
- Snapshot →
- Save media file →
- Speed settings →
- Reset →
- Action on CPU JAM →
- Network →
- ◊ Pause
- Advance Frame
- Monitor →
- Virtual keyboard
- ◊ Statusbar
- Help →
- Settings management →
- Edit →
- Quit emulator

Use arrow keys to move through options

- COMBIAN 64 MENU OPTIONS -

R RUN EMULATOR: Start the machine you have selected as default
Q QUIT: Exit and return to command line

- SET THE EMULATOR TO RUN AT BOOT -

0 COMMODORE 64
1 COMMODORE 64 SC (Require more cpu power)
2 COMMODORE 64 WITH CMD SUPER CPU
3 COMMODORE 64 DTU
4 COMMODORE 128
5 COMMODORE CBM-II
6 COMMODORE CBM-5
7 COMMODORE VIC 20
8 COMMODORE PLUS/4
9 COMMODORE PET

- BBS CONNECTION -

T RUN STRIKETERM 2014: Connect to the old school Bulletin Board System

- RASPBERRY PI CONFIGURATION AND UTILITIES -

C RASPI-CONFIG: Run Raspberry Pi Configuration tool
M MIDNIGHT COMMANDER: A friendly File Manager to copy your programs/games
X X-COPY: Copy rom from usb key automatically (Supported type: D64, T64, CRT)
E ENABLE DHCPD: Slow down boot process, dynamic ip addresses
D DISABLE DHCPD: Speed up boot process, only static ip addresses
0 REBOOT: Reboot your Raspberry Pi
S SHUTDOWN: Shutdown Raspberry Pi
I INFO: INFORMATION ABOUT COMBIAN 64

< OK >

<Cancel>

Use arrow keys to move through options

- COMBIAN 64 MENU OPTIONS -

R RUN EMULATOR: Start the machine you have selected as default
Q QUIT: Exit and return to command line

- SET THE EMULATOR TO RUN AT BOOT -

0 COMMODORE 64
1 COMMODORE 64 SC (Require more cpu power)
2 COMMODORE 64 WITH CMD SUPER CPU
3 COMMODORE 64 DTU
4 COMMODORE 128
5 COMMODORE CBM-II
6 COMMODORE CBM-5
7 COMMODORE VIC 20
8 COMMODORE PLUS/4
9 COMMODORE PET

- BBS CONNECTION -

T RUN STRIKETERM 2014: Connect to the old school Bulletin Board System

- RASPBERRY PI CONFIGURATION AND UTILITIES -

C **RASPI-CONFIG: Run Raspberry Pi Configuration tool**
M MIDNIGHT COMMANDER: A friendly File Manager to copy your programs/games
X X-COPY: Copy rom from usb key automatically (Supported type: D64, T64, CRT)
E ENABLE DHCPD: Slow down boot process, dynamic ip addresses
D DISABLE DHCPD: Speed up boot process, only static ip addresses
0 REBOOT: Reboot your Raspberry Pi
S SHUTDOWN: Shutdown Raspberry Pi
I INFO: INFORMATION ABOUT COMBIAN 64

< OK >

<Cancel>

| Raspberry Pi Software Configuration Tool (raspi-config) |

- | | |
|-------------------------|---|
| 1 System Options | Configure system settings |
| 2 Display Options | Configure display settings |
| 3 Interface Options | Configure connections to peripherals |
| 4 Performance Options | Configure performance settings |
| 5 Localisation Options | Configure language and regional settings |
| 6 Advanced Options | Configure advanced settings |
| 8 Update | Update this tool to the latest version |
| 9 About raspi-config | Information about this configuration tool |

<Select>

<Finish>

Raspberry Pi Software Configuration Tool (raspi-config)

S1 Wireless LAN	Enter SSID and passphrase
S2 Audio	Select audio out through HDMI or 3.5mm jack
S3 Password	Change password for the 'pi' user
S4 Hostname	Set name for this computer on a network
S5 Boot / Auto Login	Select boot into desktop or to command line
S6 Network at Boot	Select wait for network connection on boot
S7 Splash Screen	Choose graphical splash screen or text boot
S8 Power LED	Set behaviour of power LED

<Select>

<Back>

Please note: RFCs mandate that a hostname's labels may contain only the ASCII letters 'a' through 'z' (case-insensitive), the digits '0' through '9', and the hyphen. Hostname labels cannot begin or end with a hyphen. No other symbols, punctuation characters, or blank spaces are permitted.

<Ok>

Please enter a hostname

connodore.local

<Ok>

<Cancel>

Raspberry Pi Software Configuration Tool (raspi-config)

S1 Wireless LAN	Enter SSID and passphrase
S2 Audio	Select audio out through HDMI or 3.5mm jack
S3 Password	Change password for the 'pi' user
S4 Hostname	Set name for this computer on a network
S5 Boot / Auto Login	Select boot into desktop or to command line
S6 Network at Boot	Select wait for network connection on boot
S7 Splash Screen	Choose graphical splash screen or text boot
S8 Power LED	Set behaviour of power LED

<Select>

<Back>

Would you like the power LED to flash during disk activity?

<Yes>

<No>

The power LED will flash for disk activity

<Ok>

| Raspberry Pi Software Configuration Tool (raspi-config) |

- L1 Locale Configure language and regional settings
- L2 Timezone Configure time zone
- L3 Keyboard Set keyboard layout to match your keyboard
- L4 WLAN Country** Set legal wireless channels for your country

<Select>

<Back>

Select the country in which the Pi is to be used

AD Andorra

AE United Arab Emirates

AF Afghanistan

AG Antigua & Barbuda

AI Anguilla

AL Albania

AM Armenia

AO Angola

AQ Antarctica

AR Argentina

<Ok>

<Cancel>

| Raspberry Pi Software Configuration Tool (raspi-config) |

- 1 System Options Configure system settings
- 2 Display Options Configure display settings
- 3 Interface Options Configure connections to peripherals
- 4 Performance Options Configure performance settings
- 5 Localisation Options Configure language and regional settings
- 5 Advanced Options Configure advanced settings**
- 8 Update Update this tool to the latest version
- 9 About raspi-config Information about this configuration tool

<Select>

<Finish>

| Raspberry Pi Software Configuration Tool (raspi-config) |

A1 Expand Filesystem	Ensures that all of the SD card is available
A2 GL Driver	Enable/disable experimental desktop GL driver
A3 Compositor	Enable/disable xcompmgr composition manager
A4 Network Interface Names	Enable/disable predictable network i/f names
A5 Network Proxy Settings	Configure network proxy settings
A6 Boot Order	Choose network or USB device boot
A7 Bootloader Version	Select latest or default boot ROM software

<Select>

<Back>

Raspberry Pi Software Configuration Tool (raspi-config)

S1 Wireless LAN	Enter SSID and passphrase
S2 Audio	Select audio out through HDMI or 3.5mm jack
S3 Password	Change password for the 'pi' user
S4 Hostname	Set name for this computer on a network
S5 Boot / Auto Login	Select boot into desktop or to command line
S6 Network at Boot	Select wait for network connection on boot
S7 Splash Screen	Choose graphical splash screen or text boot
S8 Power LED	Set behaviour of power LED

<Select>

<Back>

Please enter SSID

<Ok>

<Cancel>

Use arrow keys to move through options

- COMBIAN 64 MENU OPTIONS -

- R RUN EMULATOR: Start the machine you have selected as default
- N** QUIT: Exit and return to command line

- SET THE EMULATOR TO RUN AT BOOT -

- 0 COMMODORE 64
- 1 COMMODORE 64 SC (Require more cpu power)
- 2 COMMODORE 64 WITH CMD SUPER CPU
- 3 COMMODORE 64 DTU
- 4 COMMODORE 128
- 5 COMMODORE CBM-II
- 6 COMMODORE CBM-5
- 7 COMMODORE VIC 20
- 8 COMMODORE PLUS/4
- 9 COMMODORE PET

- BBS CONNECTION -

- T RUN STRIKETERM 2014: Connect to the old school Bulletin Board System

- RASPBERRY PI CONFIGURATION AND UTILITIES -

- C RASPI-CONFIG: Run Raspberry Pi Configuration tool
- M MIDNIGHT COMMANDER: A friendly File Manager to copy your programs/games
- X X-COPY: Copy rom from usb key automatically (Supported type: D64, T64, CRT)
- E ENABLE DHCPCD: Slow down boot process, dynamic ip addresses
- D DISABLE DHCPCD: Speed up boot process, only static ip addresses
- 0 REBOOT: Reboot your Raspberry Pi
- S SHUTDOWN: Shutdown Raspberry Pi
- I INFO: INFORMATION ABOUT COMBIAN 64

< OK >

<Cancel>